



HIGH LEVEL ALARMS

for SEWAGE & WASTE WATER SYSTEMS

 
Designed for connection to a 240v supply circuit . The alarm buzzer has a minimum volume of 80dBA (1mtr distance). A rechargeable battery

Suitable for any of our floor mounted units and below ground sets.

The HLA can be connected into the Building Management System via the Remote Alarm Terminals.


PTL1A WITH SIDE MOUNTED FLOAT

1. Drill a hole in the side of the tank at high level i.e. above the "switch-on" level of the pump float.
2. Thread the rubber seal over the cable and pass the cable through the side of the unit from the inside outwards.
3. Thread the lock nut over the cable and secure in place. **Do not overtighten the lock nut.**
4. Ensure that the inflow of water to the tank is not directed onto the float.
5. Attach the 2 core cable to the terminals marked "FLOAT" in the High Level Alarm unit.

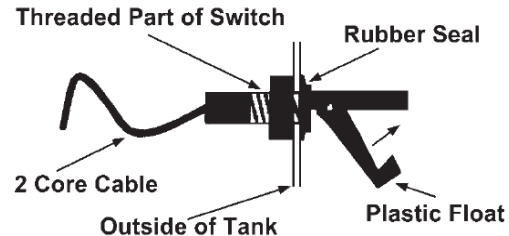


PTL1B WITH TOP MOUNTED FLOAT

 1. Drill a clearance hole in the lid, at the indent point provided, under the end cover.
2. Thread the rubber seal over the cable and pass the cable through the lid from the underside.
3. Thread the lock nut over the cable and secure the switch in place. **Do not overtighten the lock nut.**
4. Attach the 2 core cable to the terminals marked "FLOAT" in the High Level Alarm unit.

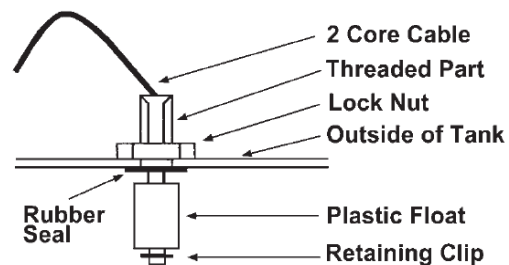


PTL1C WITH 10MTR ORANGE FLOAT

 1. A float and weight is provided to activate the High Level Alarm.
2. We recommend that the float is securely attached to the discharge pipework at a higher level than the activation level of the automatic float switch of the pump.
3. Attach the high level float so that it will not be fouled by the pipework etc.
4. Attach the 2 core cable to the terminals marked "FLOAT" in the High Level Alarm unit.
5. For activation at high level use the black and brown cables.

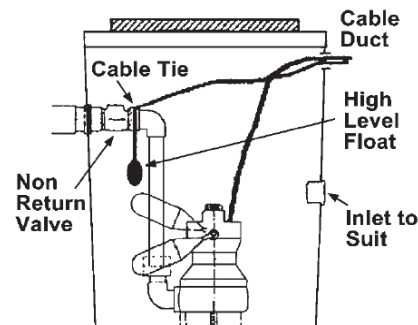

PTL 1D (REMOTE ALARM)

 1. Site alarm panel as required with a 240V power supply, preferably not from the same source as the pumps.
2. Run a 0.75mm 2 core cable from the volt free contact on the main control panel to the PTL 1D alarm panel terminals marked float, wherever this is sited away from the main Control Panel.
3. The HLA can be connected into the Building Management System via the Remote Alarm Terminals.

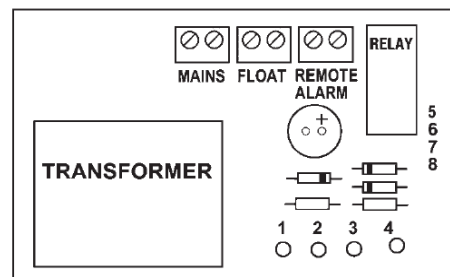

NOTE: PUMP TECHNOLOGY PTL/1

These HLA can be connected into the Building Management System via the Remote Alarm Terminals. The Alarms require their own DEDICATED power supply and MUST NOT be powered from the same source as the pumps.