



PTL-GD Grease Doser


Ideal for Offices, Schools, Shops, Pubs, Restaurants, Factories, Hospitals and Warehouses.

The PTL-GD comes with pre programmed delivery rates making the unit quick and easy to set up. Pre fitted with a specially designed long life battery pack ensuring the minimum of installation time and only annual maintenance. Being battery powered it is safe for all kitchen and drainage applications and requires only the minimum of expertise to install.

SEKO's timed dosage systems are designed for use with biological drain dosing systems and provides accurate automatic dosing of enzyme based chemicals that will naturally prevent the build-up of fat, providing they are applied regularly at the appropriate time of day. They can be installed directly into waste outlet pipe, grease traps, pumping stations or urinals.

Product Features

- Designed to dose chemicals at preset times
- Comes with pre-programmed delivery rates making the unit quick and easy to set up.
- Pre-fitted with a specially designed long life battery.
 - Life in normal use @250mls/day >1 year
 - Operating Temperature -5°C to +55°C
 - Low maintenance

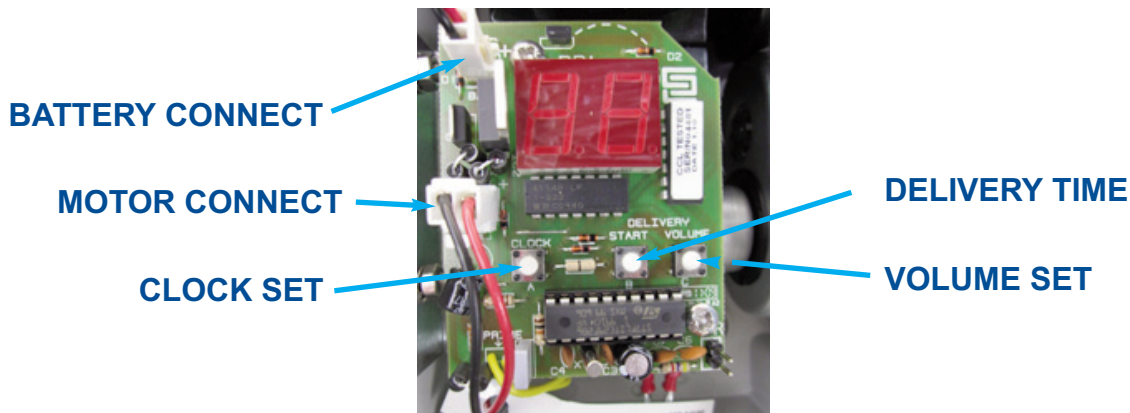

INSTALLATION GUIDELINES

PTL-GD IS SUPPLIED WITH THE MOTOR DISCONNECTED
ALWAYS PLUG IN MOTOR CONNECTOR BEFORE USE

1. Locate doser within 5mtr of the chemical container.
- The unit is supplied with 4mtr of pvc tubing and a tube support.
2. Fix doser to the wall using the supplied fixing screws or raw plugs.
3. Place tube support end into chemical container and other end to the inlet connector of the doser pump.
- (NB warming the PVC Tube to assist in fitting. Inlet & Outlet of pump shown by arrows on pump face)
4. Connect outlet pipe from doser directly into the sink trap or grommit connection if using a Grease Trap. (See our PTL-GT Grease Traps)
5. Prime pump by pressing the test button located on underside of doser.



CHECK AND ADJUST CLOCK

1. Press and hold the CLOCK button, the display should show the current hour of the day. NOTE the clock only displays hours.
2. To set the clock press and hold the CLOCK button, after five seconds the hours will increase. Release button when hour required is displayed. Always set the clock to the nearest hour.

CHECK AND ADJUST CLOCK DELIVERY START TIME

1. Press the DELIVERY TIME button. The display will show the delivery start time in hours. (A dot will also be displayed to distinguish this from the clock display)
2. To change the delivery start time press and hold the DELIVERY TIME button. After five seconds the start time hour will increase. Release button when hour required is displayed.

CHECK AND ADJUST DELIVERY VOLUME

Press the VOLUME SET button. The display will show the delivery setting (from 1 to 9). Each number represents a different delivery volume as shown below

- | | | |
|-----------|-----------|-----------|
| 1. 100mls | 4. 250mls | 7. 400mls |
| 2. 150mls | 5. 300mls | 8. 450mls |
| 3. 200mls | 6. 350mls | 9. 500mls |

To adjust delivery press and hold VOLUME SET button until required number is displayed.

